



# Instruction for assembly of the GVH Quick Ballaster.

Parts included in the packet.

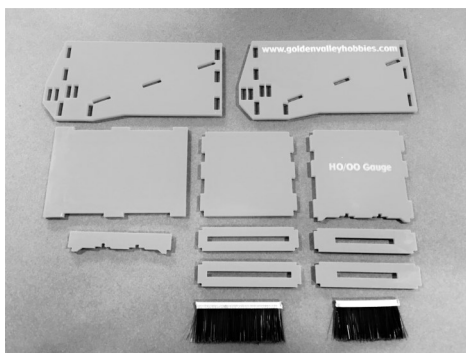

Step 1.


Take one side piece with the web address lay face down on work area. Then place back panel in place. This can only be fitted one way round.

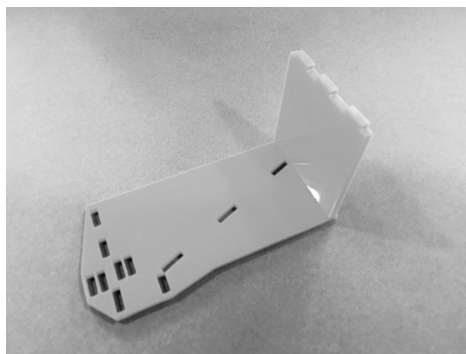


Step 2. Place the sloping panel in the middle this can also only go in one way round. Below this fit the track guide piece.




Step 3. Take the two brush holder pieces with the longer holes in them. These are for the back brush.

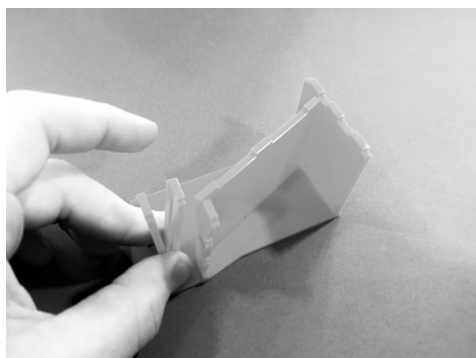


Step 4. Place the Front panel in with the OO/HO Gauge text facing out.

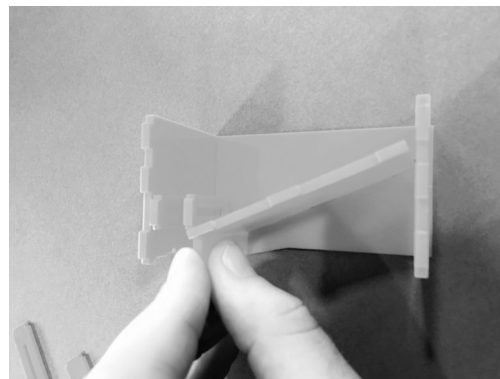

Step 5. Add the front brush holders for the shorter brush and place the brushes in there right places

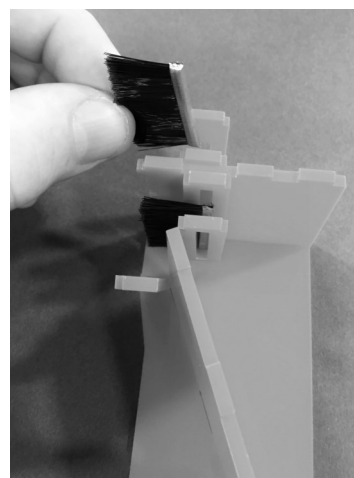

Step 6. Add the other side piece onto the top of the parts you have already put together. Working from the back position the pieces with the use of a small screw driver.

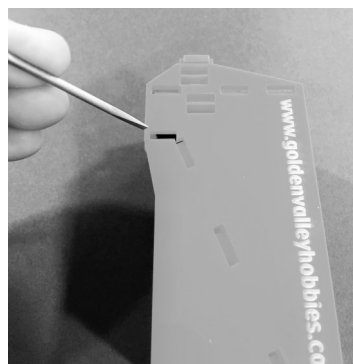

Step 7. Use Liquid cement or similar to fix together permanently. Drip glue through joint holes.